

# What's New?

## Content

Embedding the new thermal transfer printers THM MultiMark and THM MultiMark Plus .....	2
New print options for THM printers .....	4
Print test page of several MultiCards on PrintJet Advanced .....	5
Printer "Calibration" moved.....	6
Barcode GS1 DataMatrix .....	6
Operator guidance Updater optimised.....	7
Display changed marker type names .....	8
Automatic adjustment of the padding for barcode fields on black labels .....	8
<b>New Options .....</b>	<b>9</b>
TeamViewer Link .....	9
Replacements .....	9
<b>Import .....</b>	<b>10</b>
Assign font attributes .....	10
VK import on template.....	10
Fast Excel® import/printing .....	11

 
## Embedding the new thermal transfer printers THM MultiMark and THM MultiMark Plus

The THM MultiMark and THM MultiMark Plus printer control is effected via the M-Print® PRO Status Monitor (analogous to THM MMP). There is no need to install a separate driver for the printer.


The printer connection is established via the M-Print® PRO Printer Explorer.

To add a printer,

- Start the M-Print® PRO Printer Explorer,
- Click on the “Add...” button,
- Select the „THM MultiMark“ or „THM MultiMark Plus“ printer.

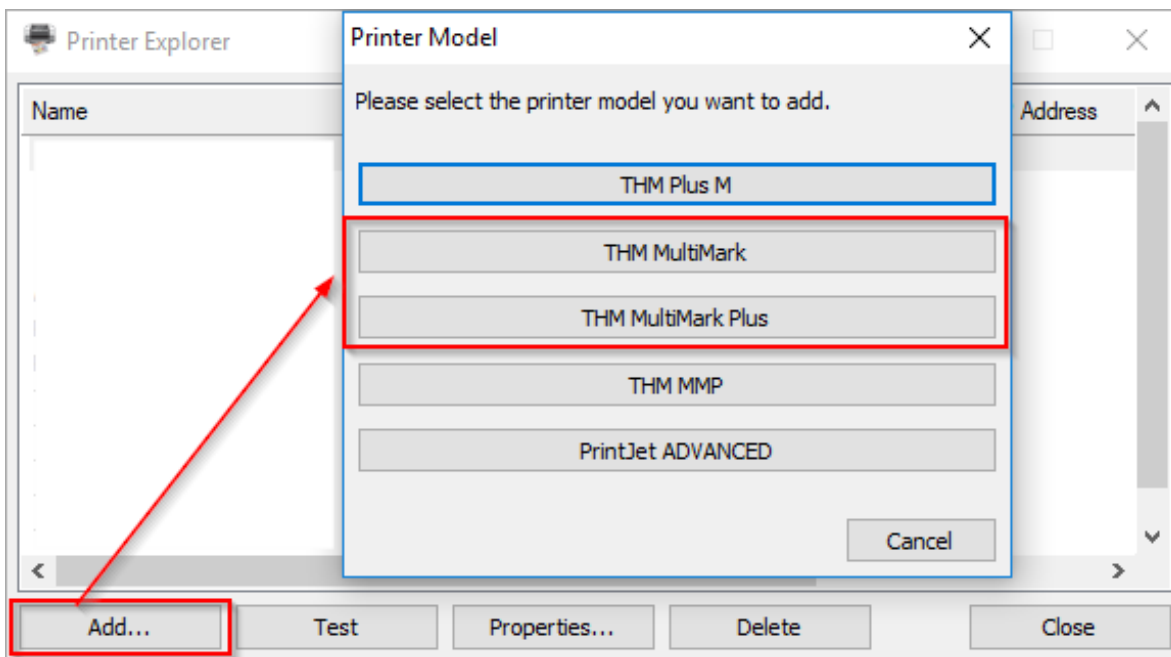


 - Choose how you want to connect your printer.

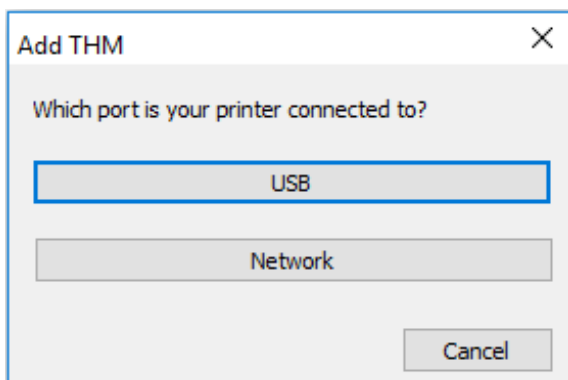

## USB port

 
- Click on the “USB” button.
- The program automatically searches for connected printers.

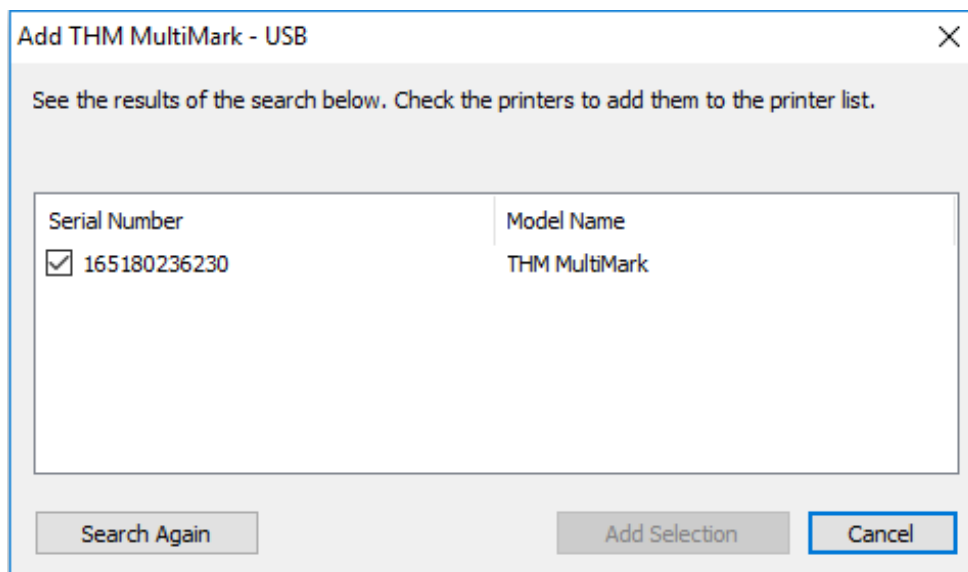

- Select the required USB port or printer and
- Click on the “Add Selection” button.


## Network interface

 - Click on the “Network” button.
- In the dialog, enter the settings for the printer on the network and click on the “Add” button.

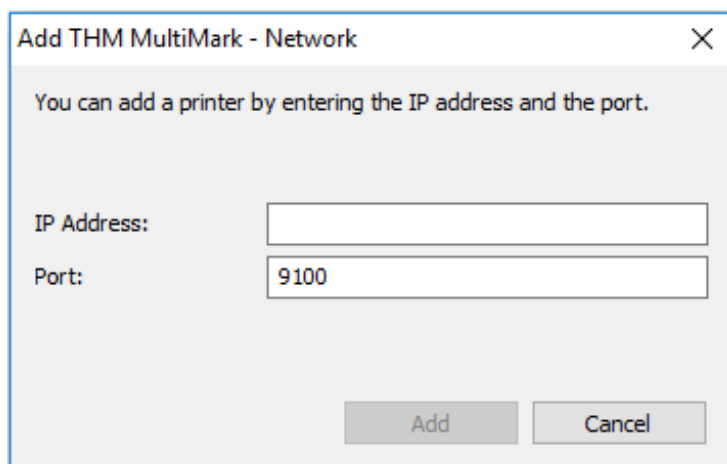

## New print options for THM printers

 Under Tools > Options, new print options for THM printers may be set.

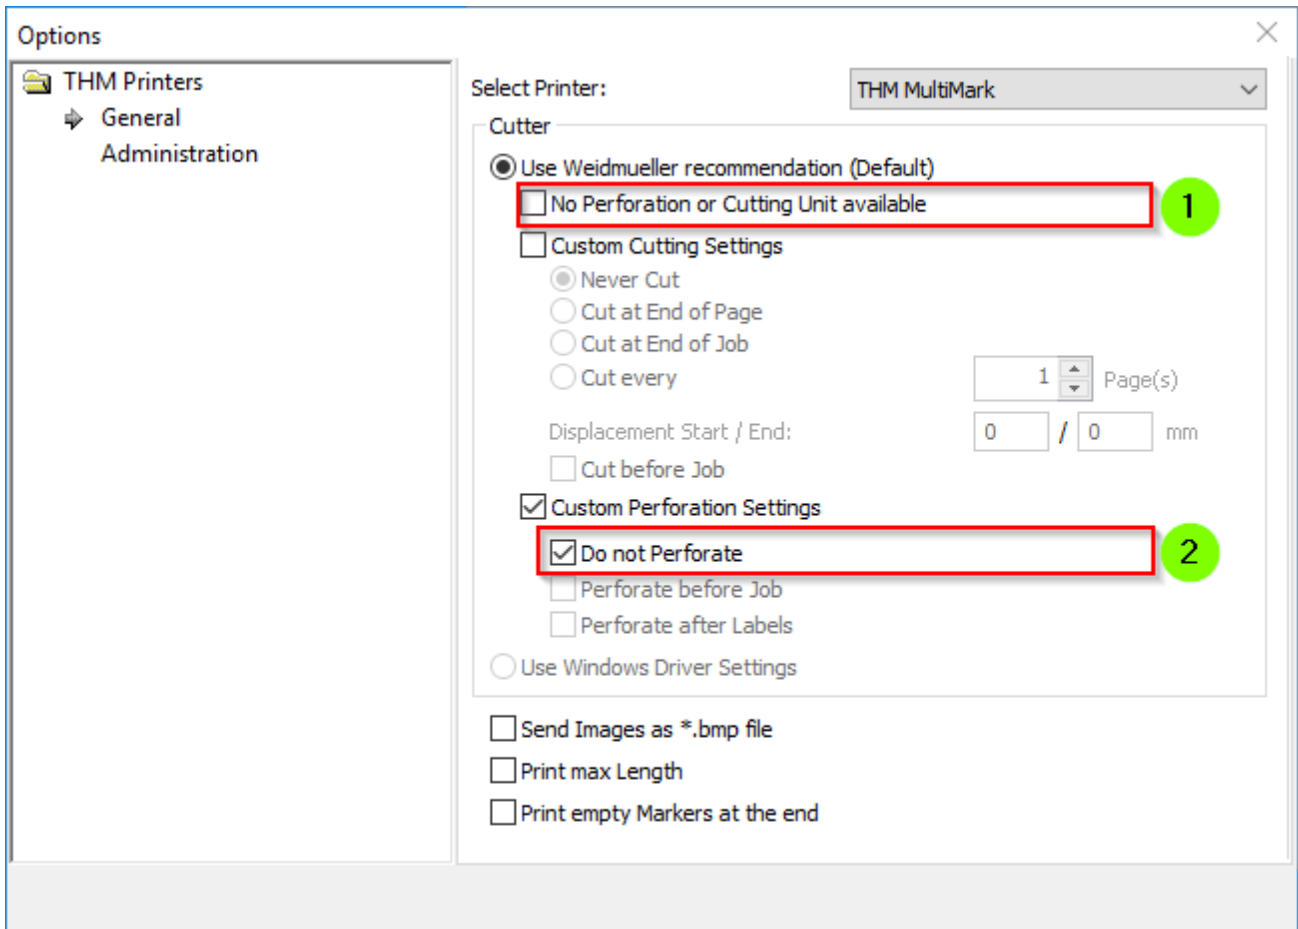

### 1 – No Perforation or Cutting Unit available

For THM printers with tear-off plate, this option can be used to deactivate the perforation and cutting settings.

### 2 – Do not Perforate

This option makes it easier to deselect the perforation.

## Speed adjustment on THM printers

 
In order to optimise the print process, the speed for printing all materials on THM MMP, THM MultiMark and THM MultiMark Plus has been reduced to 30.

## Print test page of several MultiCards on PrintJet Advanced

Via the calibration dialog under "File > Adjust marker type", test pages of different MultiCards can be printed on PrintJet **ADVANCED** printers.


1. Option:

Test prints of different marker types are printed **on the same** PrintJet **Advanced** printer by one mouse click:

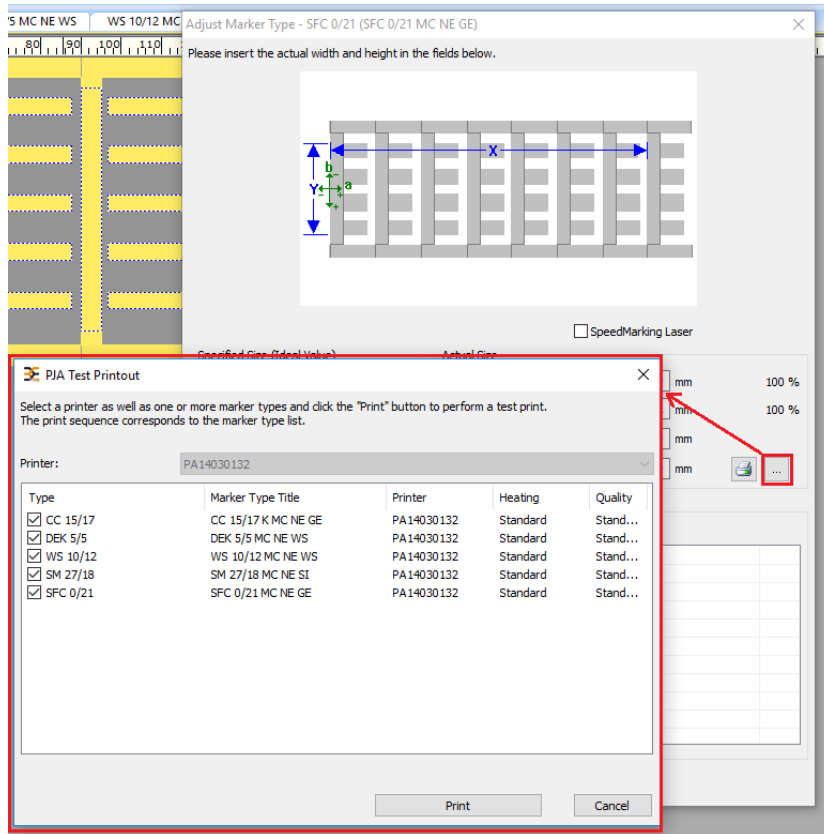


2. Option:

 Test prints of different marker types are printed **on different** PrintJet **Advanced** printers by one mouse click:

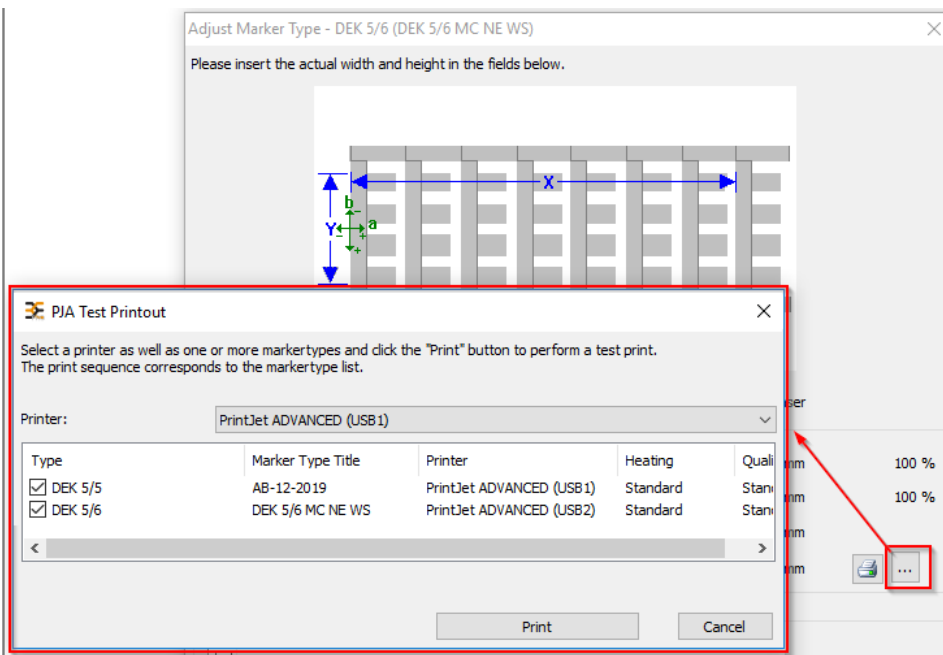


## Printer "Calibration" moved

 To optimise the user interface, the "Calibration" button has been moved from the print dialog to the "Tools -> Printer Administration -> Calibration" menu.

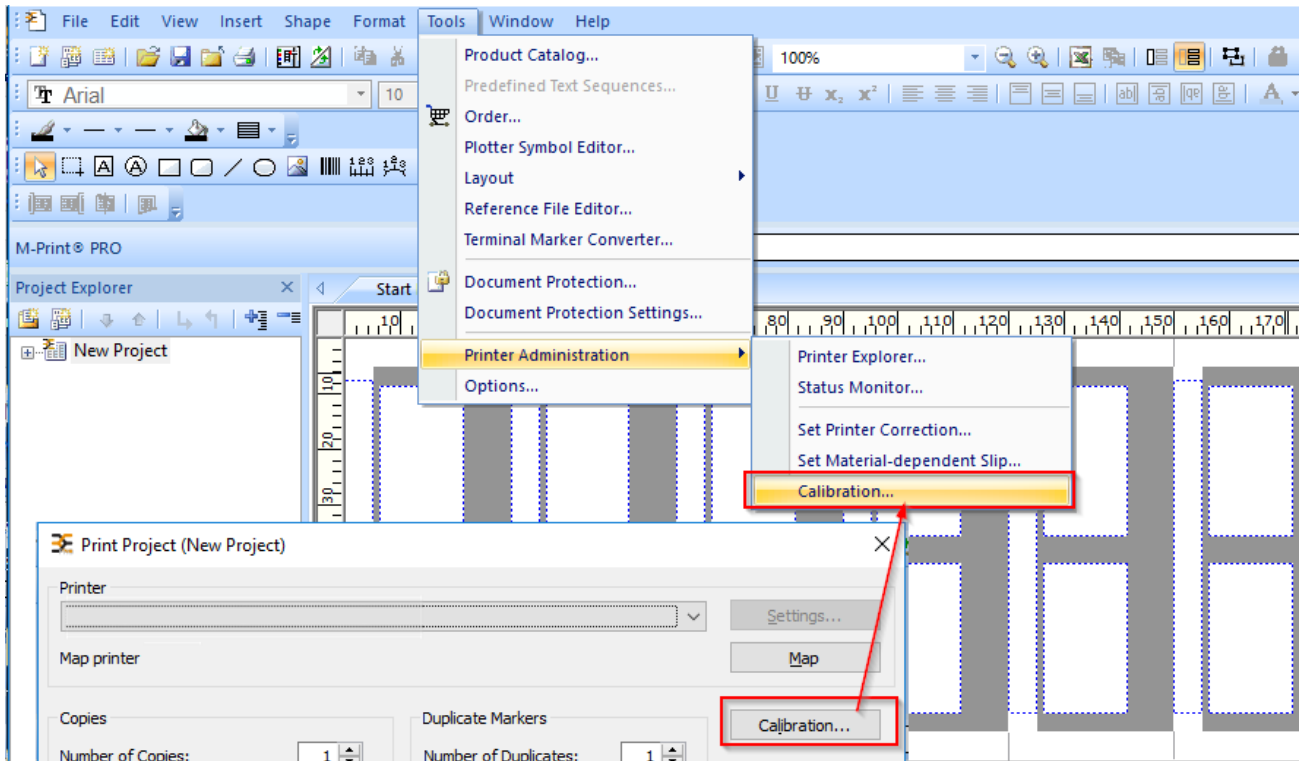

## Barcode GS1 DataMatrix

 
A new barcode type „GS1 DataMatrix“ was added.

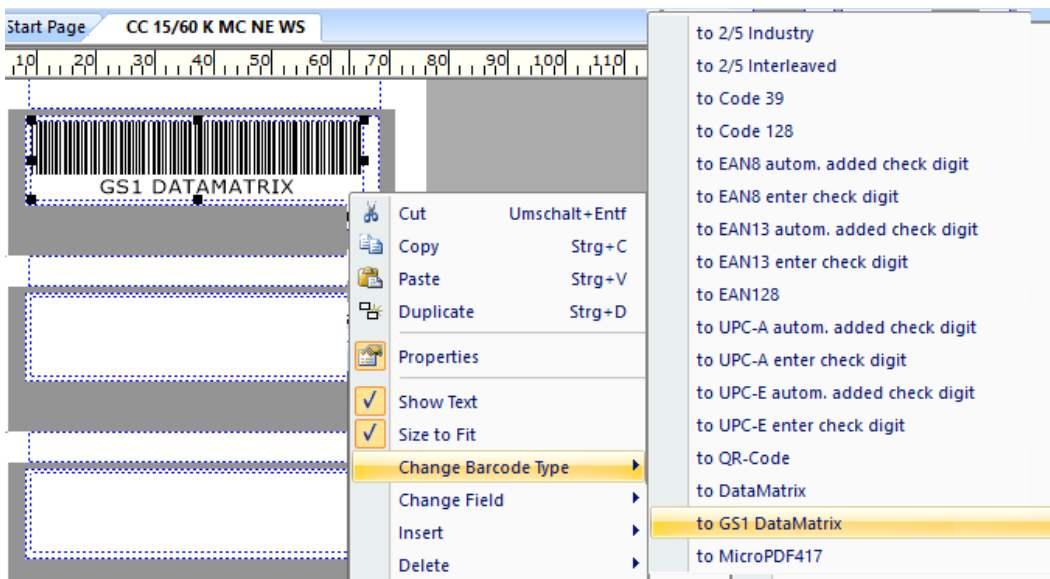

## Operator guidance Updater optimised


The operator guidance of the updater has been optimised.

 For example, instead of individual update steps, all currently available updates are displayed and can be selected.

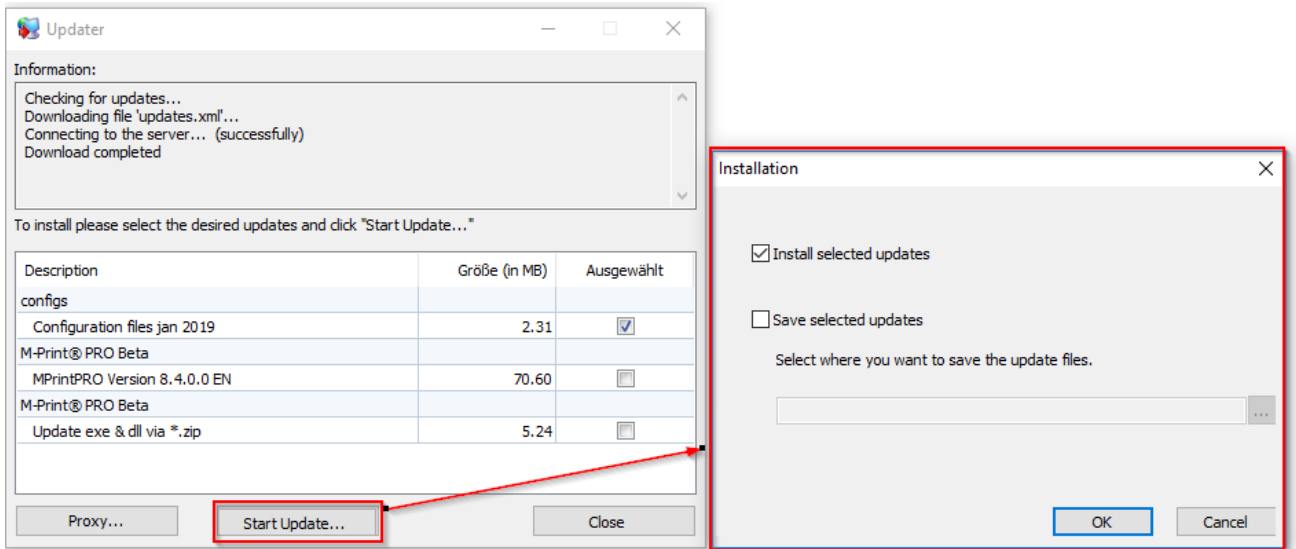


## Transfer format for inline editing

 The possibility to transfer formats has been extended to the Inline Editor.

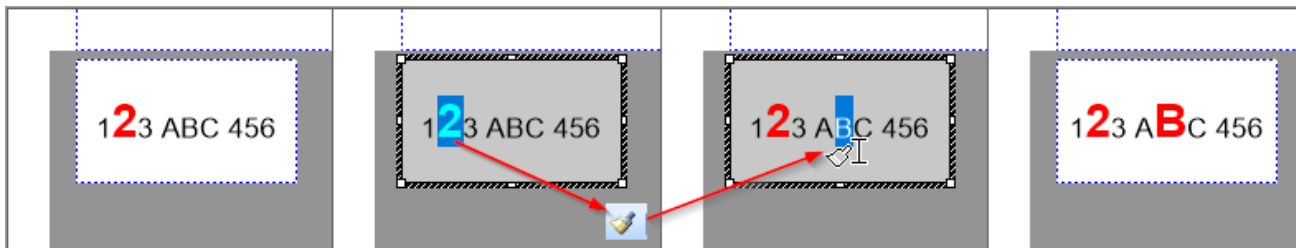


 It is possible to transfer format sequences for entire text fields.

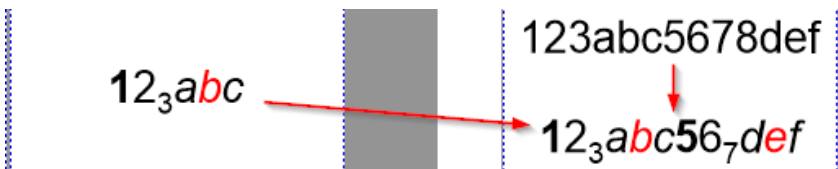

## Display changed marker type names

 Customised marker type titles are also displayed in the tabs.

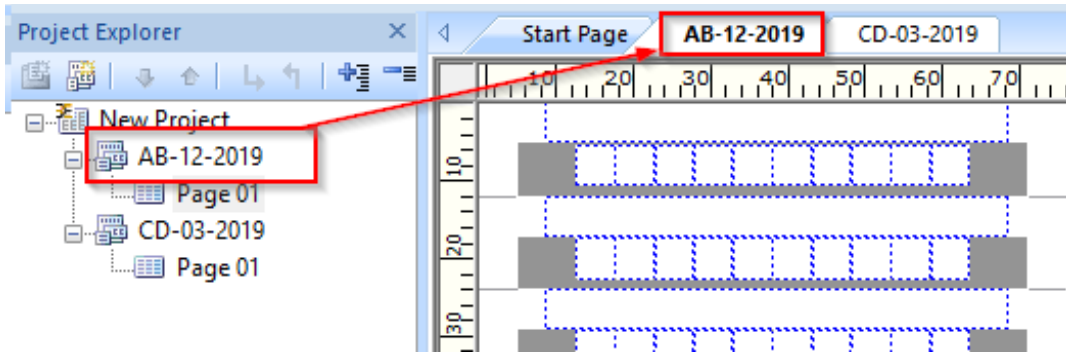


## Automatic adjustment of the padding for barcode fields on black labels

Under "Tools > Options > Element Defaults > Barcode" the automatic adjustment of the padding after marker type changes can be activated.

Example:

 - 1: A "large" marker with a large barcode field is used.  
For better readability, an internal distance of 4 mm is set.
- 2: The marker type is changed to a smaller marker.
- 3 and 4: Then the fixed padding of 4 mm is proportionally too large.
- 5: By setting the option and an additional minimum distance,
- 6: the padding is automatically adjusted.

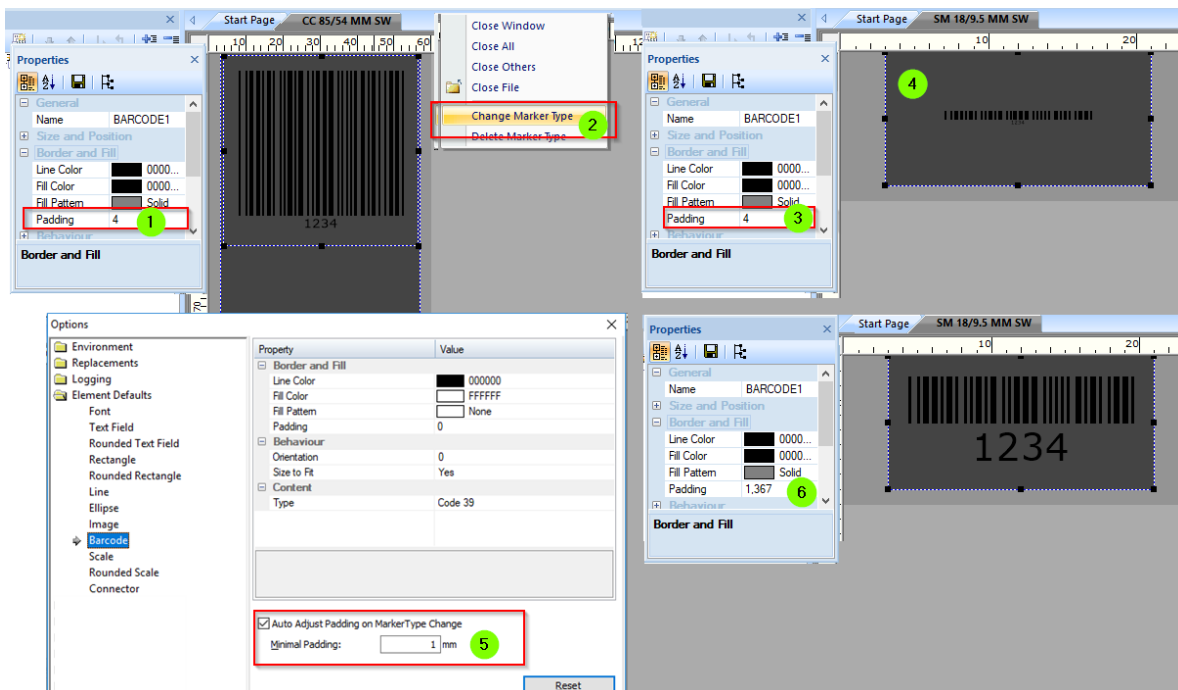




## New Options


### TeamViewer Link

 Under "Tools > Options > Support", a TeamViewer client can be downloaded and executed from the Weidmüller server.

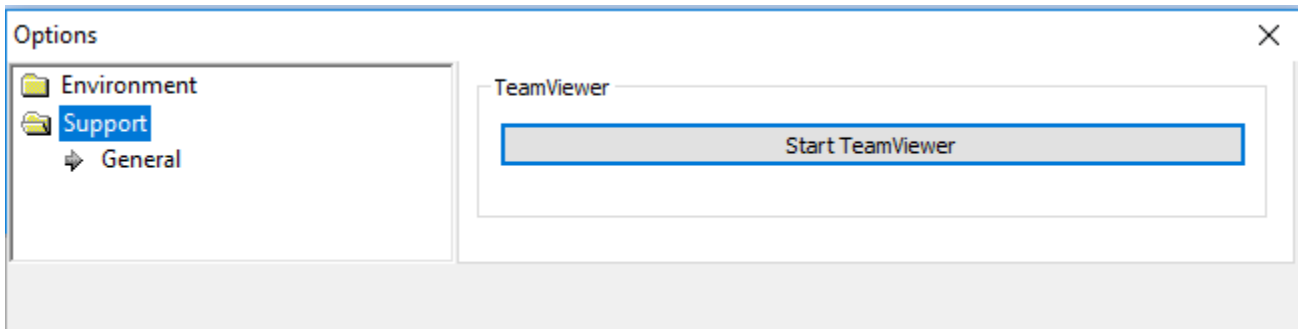


## Replacements

 After an import into a graphic object, an image path replaces the characters defined in this list. If the image is available in the standard symbol directory, just the file name can be entered.

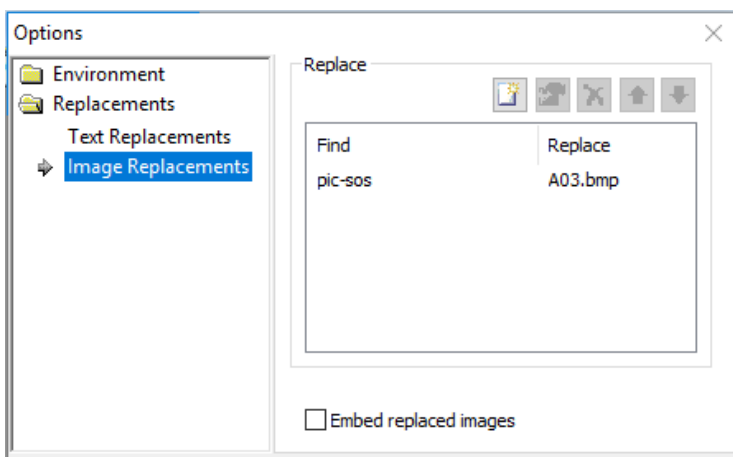


### Example:

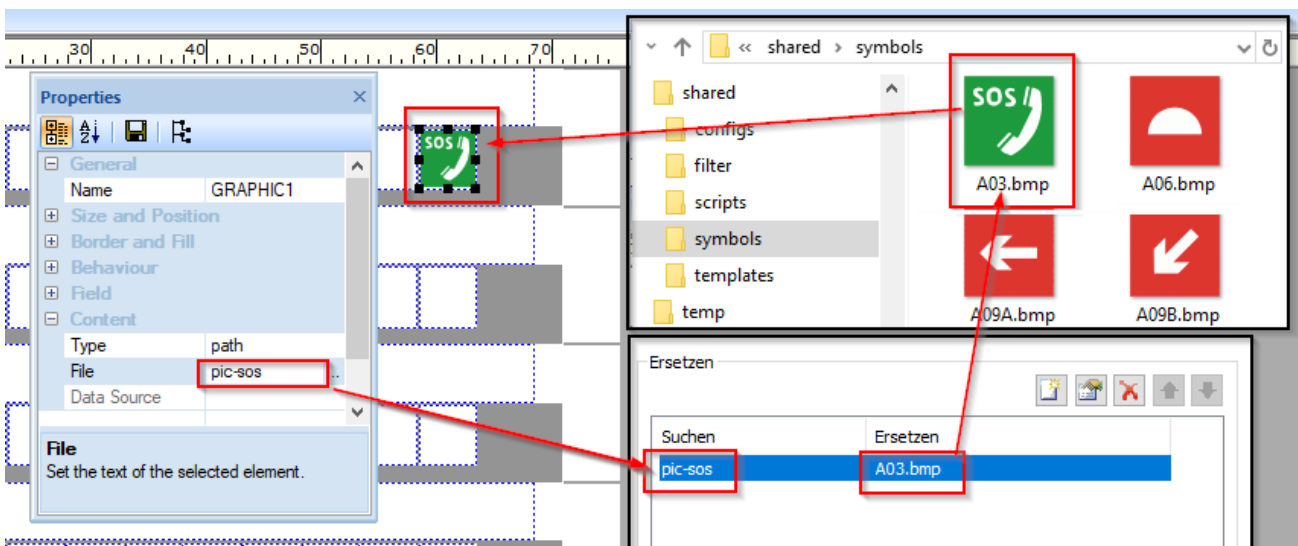 

## Import

### Assign font attributes

 Different text formats from the import columns can be assigned in the import wizard.

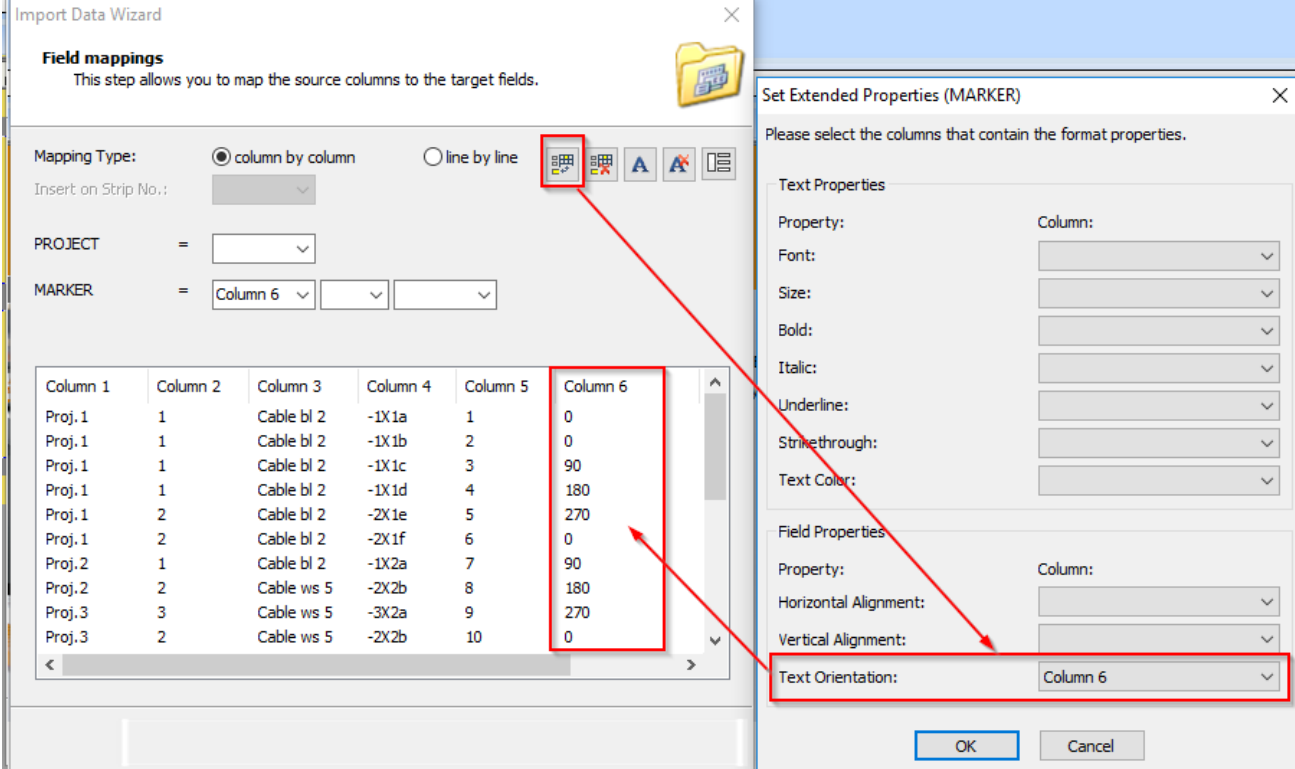

**Import Data Wizard**

**Field mappings**  
This step allows you to map the source columns to the target fields.

Mapping Type:  column by column  line by line

Insert on Strip No.:

PROJECT =

MARKER =  Column 6

Column 1	Column 2	Column 3	Column 4	Column 5	Column 6
Proj.1	1	Cable bl 2	-1X1a	1	0
Proj.1	1	Cable bl 2	-1X1b	2	0
Proj.1	1	Cable bl 2	-1X1c	3	90
Proj.1	1	Cable bl 2	-1X1d	4	180
Proj.1	2	Cable bl 2	-2X1e	5	270
Proj.1	2	Cable bl 2	-2X1f	6	0
Proj.2	1	Cable bl 2	-1X2a	7	90
Proj.2	2	Cable ws 5	-2X2b	8	180
Proj.3	3	Cable ws 5	-3X2a	9	270
Proj.3	2	Cable ws 5	-2X2b	10	0

**Set Extended Properties (MARKER)**

Please select the columns that contain the format properties.

**Text Properties**

Property: Column:

Font:

Size:

Bold:

Italic:

Underline:

Strikethrough:

Text Color:

**Field Properties**

Property: Column:

Horizontal Alignment:

 
Vertical Alignment:

Text Orientation:  Column 6

OK Cancel

### VK import on template

The import via the VK filter can now also be performed on templates.  
As a reference (in the reference file), you have to refer to the template names.

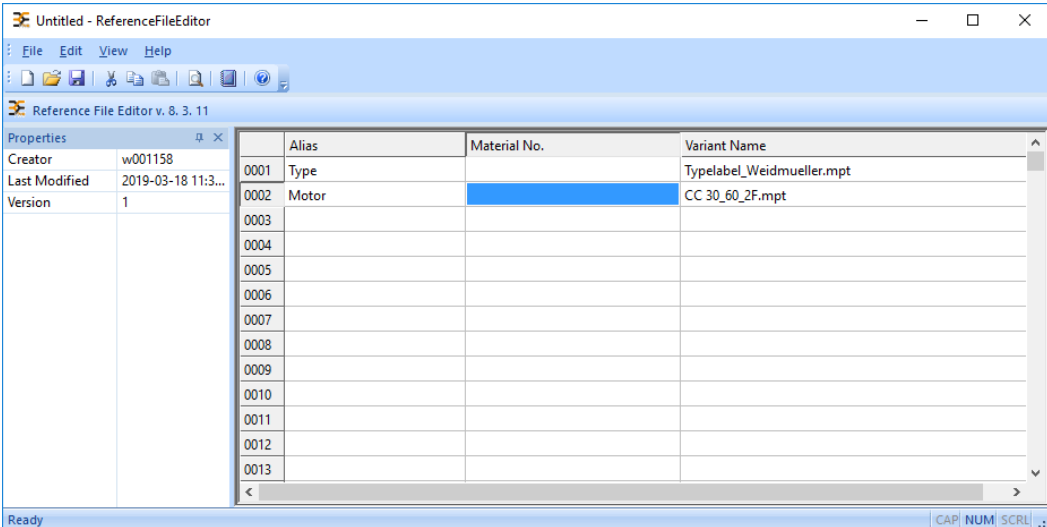

Untitled - ReferenceFileEditor

File Edit View Help

Reference File Editor v. 8. 3. 11

Properties

Creator w001158


Last Modified 2019-03-18 11:3...

Version 1

Alias	Material No.	Variant Name
0001	Type	Typelabel_Weidmueller.mpt
0002	Motor	CC 30_60_2F.mpt
0003		
0004		
0005		
0006		
0007		
0008		
0009		
0010		
0011		
0012		
0013		

Ready

CAP NUM SCRL

 When creating the reference file, make sure that only templates of the same marker type are assigned.  
For example, only MultiCard markers, only "standard" labels (THM ...) or only endless strip labels (EL ...).


## Fast Excel® import/printing

 For a fast Excel® import or printing, a saved import script file (\*.mis) can be opened.

### Preparation to use this functionality:

#### Step 1: Create an import script file with the Import Wizard

To create the import script file, please apply a query in the Import Wizard and select the query fields.

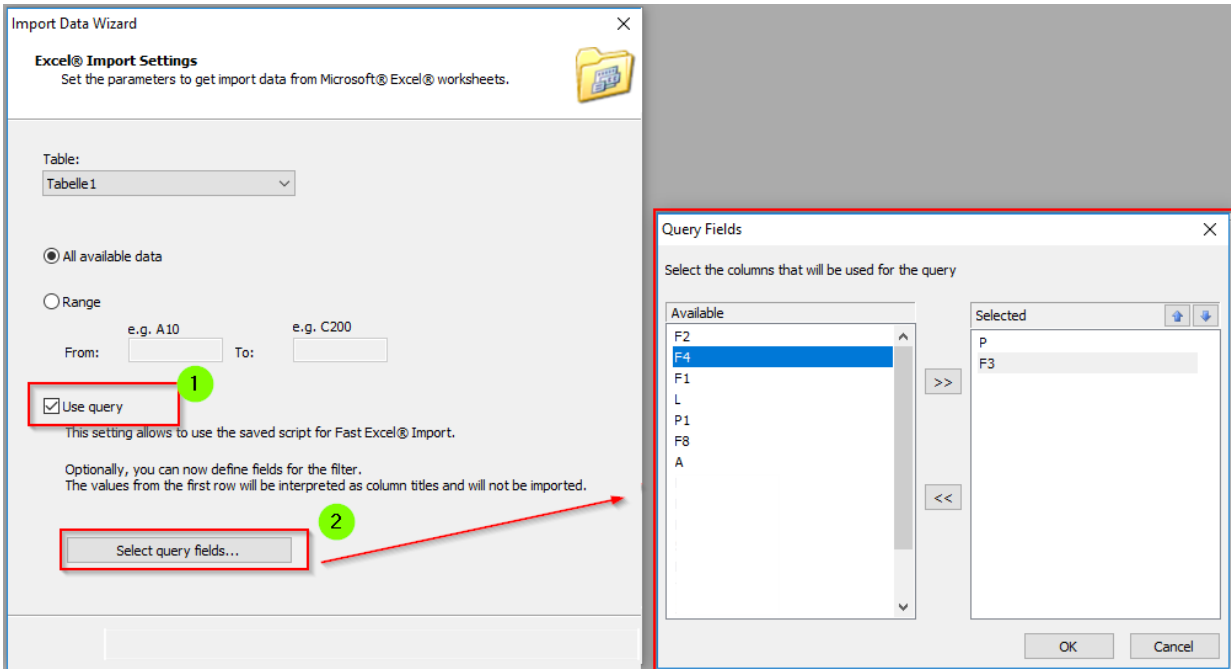

At the end of the import a script file \*.mis must be saved.

#### Step 2: Open the import script file

Via the menu item "File > Open" the import script file (\*.mis) can be opened.

#### Step 3: Adjust parameters

Via a dialog the source file for this script can be adapted and the range filter can be selected. The data will then either be imported or directly printed.

