

## Overview about supported modules and required firmware versions of automation controller: UC20-WL2000-AC (1334950000)

### Firmware updating Information:

An update of the firmware can be done via the u-create web-based engineering tool.  
A description of the firmware update can be found in the u-control manual on the Weidmüller website: [www.weidmueller.com](http://www.weidmueller.com)

Module	Controller firmware version
1315390000 UR20-16DI-N	>= 1.2.0
1315400000 UR20-16DI-N-PLC-INT	>= 1.2.0
1315200000 UR20-16DI-P	>= 1.0.0
1315210000 UR20-16DI-P-PLC-INT	>= 1.0.0
1315440000 UR20-16DO-N	>= 1.2.0
1315450000 UR20-16DO-N-PLC-INT	>= 1.2.0
1315250000 UR20-16DO-P	>= 1.0.0
1315270000 UR20-16DO-P-PLC-INT	>= 1.0.0
1315570000 UR20-1CNT-100-1DO	>= 1.2.0
1315580000 UR20-1CNT-500	>= 1.2.0
1315750000 UR20-1COM-232-485-422	>= 1.2.0
2007430000 UR20-1COM-SAI-PRO	Not yet supported
2489830000 UR20-1SM-50W-6DI2DO-P	>= 1.4.0
1508090000 UR20-1SSI	>= 1.2.0
1990070000 UR20-2AI-SG-24-DIAG	Not yet supported
1315590000 UR20-2CNT-100	>= 1.2.0
1460140000 UR20-2DI-P-TS	>= 1.2.0
1508080000 UR20-2FCNT-100	>= 1.2.0
1315600000 UR20-2PWM-PN-0.5A	>= 1.2.0
1315610000 UR20-2PWM-PN-2A	>= 1.2.0
2007420000 UR20-3EM-230V-AC	>= 1.1.0
2001670000 UR20-4AI-R-HS-16-DIAG	>= 1.0.0
1315700000 UR20-4AI-RTD-DIAG	>= 1.0.0
2456540000 UR20-4AI-RTD-HP-DIAG	>= 1.2.0
1315710000 UR20-4AI-TC-DIAG	>= 1.0.0
1394390000 UR20-4AI-UI-12	>= 1.0.0
1315620000 UR20-4AI-UI-16	>= 1.0.0
1315690000 UR20-4AI-UI-16-DIAG	Not yet supported
1506910000 UR20-4AI-UI-16-DIAG-HD	Not yet supported
1506920000 UR20-4AI-UI-16-HD	>= 1.2.0
1993880000 UR20-4AI-UI-DIF-16-DIAG	Not yet supported
2544660000 UR20-4AI-UI-DIF-32-DIAG	Not yet supported
1315680000 UR20-4AO-UI-16	>= 1.0.0
1315730000 UR20-4AO-UI-16-DIAG	Not yet supported
1506930000 UR20-4AO-UI-16-DIAG-HD	Not yet supported
1510690000 UR20-4AO-UI-16-HD	>= 1.2.0

2453880000	<b>UR20-4AO-UI-16-M</b>	>= 1.2.0
2453870000	<b>UR20-4AO-UI-16-M-DIAG</b>	Not yet supported
1315740000	<b>UR20-4COM-IO-LINK</b>	Not yet supported
1550070000	<b>UR20-4DI-2W-230V-AC</b>	>= 1.0.0
1529780000	<b>UR20-4DI-4DO-PN-FSOE</b>	Not yet supported
2464580000	<b>UR20-4DI-4DO-PN-FSOE-V2</b>	Not yet supported
1335060000	<b>UR20-4DI-4DO-PN-FSPS</b>	Not yet supported
2464570000	<b>UR20-4DI-4DO-PN-FSPS-V2</b>	Not yet supported
1315350000	<b>UR20-4DI-N</b>	>= 1.2.0
1315170000	<b>UR20-4DI-P</b>	>= 1.0.0
2009360000	<b>UR20-4DI-P-3W</b>	>= 1.0.0
1460150000	<b>UR20-4DI-P-TS</b>	>= 1.2.0
2457250000	<b>UR20-4DO-ISO-4A</b>	>= 1.0.0
1315410000	<b>UR20-4DO-N</b>	>= 1.2.0
1315420000	<b>UR20-4DO-N-2A</b>	>= 1.2.0
1315220000	<b>UR20-4DO-P</b>	>= 1.0.0
1315230000	<b>UR20-4DO-P-2A</b>	>= 1.0.0
1394420000	<b>UR20-4DO-PN-2A</b>	>= 1.0.0
1315550000	<b>UR20-4RO-CO-255</b>	>= 1.0.0
1315540000	<b>UR20-4RO-SSR-255</b>	>= 1.0.0
1315720000	<b>UR20-8AI-I-16-DIAG-HD</b>	Not yet supported
1315650000	<b>UR20-8AI-I-16-HD</b>	>= 1.0.0
1315670000	<b>UR20-8AI-I-PLC-INT</b>	>= 1.0.0
2555940000	<b>UR20-8AI-RTD-DIAG-2W</b>	>= 1.2.0
2457240000	<b>UR20-8DI-ISO-2W</b>	>= 1.0.0
1315370000	<b>UR20-8DI-N-3W</b>	>= 1.2.0
2456530000	<b>UR20-8DIO-P-3W-DIAG</b>	>= 1.8.0
1315180000	<b>UR20-8DI-P-2W</b>	>= 1.0.0
1394400000	<b>UR20-8DI-P-3W</b>	>= 1.0.0
1315190000	<b>UR20-8DI-P-3W-HD</b>	>= 1.0.0
1529800000	<b>UR20-8DI-PN-FSOE</b>	Not yet supported
2464600000	<b>UR20-8DI-PN-FSOE-V2</b>	Not yet supported
1335070000	<b>UR20-8DI-PN-FSPS</b>	Not yet supported
2464590000	<b>UR20-8DI-PN-FSPS-V2</b>	Not yet supported
1315430000	<b>UR20-8DO-N</b>	>= 1.2.0
1315240000	<b>UR20-8DO-P</b>	>= 1.0.0
1509830000	<b>UR20-8DO-P-2W-HD</b>	>= 1.0.0
1335030000	<b>UR20-PF-O-1DI-SIL</b>	>= 1.0.0
1335040000	<b>UR20-PF-O-2DI-DELAY-SIL</b>	>= 1.0.0
1335050000	<b>UR20-PF-O-2DI-SIL</b>	>= 1.0.0
	<b>SAI subbus modules IP67</b>	Not yet supported

