

ELCO connector	RS ELCO 90/90RM S/Z
90poles	RS ELCO 90/90LM S/Z
A	1
B	2
C	3
D	4
E	5
F	6
H	7
J	8
K	9
L	10
M	11
N	12
P	13
R	14
S	15
T	16
U	17
V	18
W	19
X	20
Y	21
Z	22
AA	23
AB	24
AC	25
AD	26
AE	27
AF	28
AH	29
AJ	30
AK	31
AL	32
AM	33
AN	34
AP	35
AR	36
AS	37
AT	38
AU	39
AV	40
AW	41
AX	42
AY	43
AZ	44
BA	45
BB	46
BC	47
BD	48
BE	49
BF	50
BH	51
BJ	52
BK	53
BL	54
BM	55
BN	56
BP	57
BR	58
BS	59
BT	60
BU	61
BV	62
BW	63
BX	64
BY	65
BZ	66
CA	67
CB	68
CC	69
CD	70
CE	71
CF	72
CH	73
CJ	74
CK	75
CL	76
CM	77
CN	78
CP	79
CR	80
CS	81
CT	82
CU	83
CV	84
CW	85
CX	86
CY	87
CZ	88
DA	89
DB	90
Note	