


Timer (BT TT)



Ordering data


| Connection system | Type | Qty. | Order No. |
|-------------------|---------|------|------------|
| Screw connection | BT TT-S | 1 | 8647740000 |

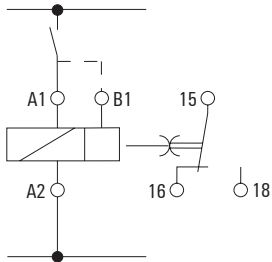

Functions

Function BT TT – pulse emitter

When the power supply is connected (A1/A2), the repeat cycle begins with two independently adjustable times. The standard setting is to start at the normal position. A bridge between connections A1 and A2 allows the module to start at the operated position.

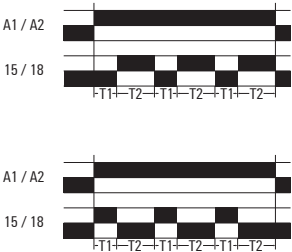

Note:

Switching of power supply stops the time function immediately.