

INSTALLATION INSTRUCTIONS
& CONDITIONS FOR SAFE USE

II 3 G Ex ec II C Gc

Modular TERMINAL Blocks: A- Series**TÜV 16 ATEX 8064U**
IECEx TUR 17.0030U

Standards:

EN IEC 60079-0:2018 and EN IEC 60079-7:2015 A1:2018
IEC 60079-0: 7th Edition and IEC 60079-7: 5.1th Edition**Modular Terminal Blocks: AAP22 4 LI-FS**

Version:	Order No	
	AAP22 4 LI-FS*	2429010000
	AAP22 4 LI-FS 10-36V*	2459010000
	AAP22 4 LI-FS 30-70V*	2460140000
	AAP22 4 LI-FS 60-150V*	2460130000
	AAP22 4 LI-FS 100-250V*	2460120000

in conjunction with:	AAP22 10 LO-LO*	2428990000
	AAP22 10 FE-LO*	2429000000

Accessories:	Type	Order No	
	end plate	AEP AP22*	2429040000
	end bracket	AEB 35 SC/1*	1991920000

Terminal rail	TS 35/... acc.to DIN EN 60715
---------------	-------------------------------

Cross-connection	Plugable	Order No	
	ZQV 4N/2*		1527930000
	ZQV 4N/3*		1527940000
	ZQV 4N/4*		1527970000
	ZQV 4N/5*		1527980000
	ZQV 4N/6*		1527990000
	ZQV 4N/7*		1528020000
	ZQV 4N/8*		1528030000
	ZQV 4N/9*		1528070000
	ZQV 4N/10*		1528090000

Insulation material:

- Type	Wemid
- Tracking resistance (A) to IEC 60112	CTI ≥ 600
- Flammability class to UL 94	V0
- Operating temperature range	-60°C...+130°C (insulating material limit)

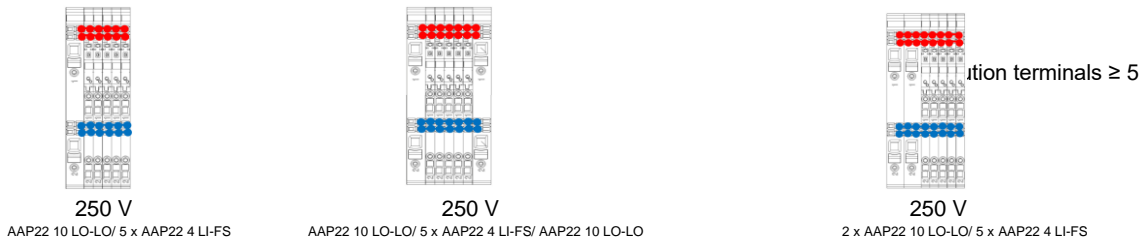
* in all colours

Technical data according to IEC/EN 60079-7 (increased safety "ec"):

	Separate arrangement 250 V	Compound arrangement 250 V
AAP22 4 LI-FS		
AAP22 4 LI-FS 10-36V		10-36 V
AAP22 4 LI-FS 30-70V		30-70 V
AAP22 4 LI-FS 60-150V		60-150 V
AAP22 4 LI-FS 100-250V		100-250 V
	AAP22 4 LI-FS	AAP22 10 LO-LO
- Rated voltage	250 V / 250 V	250 V / 250 V
- Rated current	6,3 A / $\Delta T < 40$ K	31,5 A / 31,5 A / $\Delta T < 40$ K
- Rated power dissipation P _{vk}		
Separate arrangement	4,0 W (6,3 A)	
Compound arrangement	2,5 W (6,3 A)	
- Contact resistance with rated conductor	0,3 m Ω / 4,5 m Ω (with dummy fuse link no. 2)	0,3 m Ω / 0,3 m Ω
- Rated conductor cross section	4mm ²	10mm ²
- Conductor cross section solid	0,5 - 4mm ²	0,5 - 10mm ²
- Conductor cross section stranded	0,5 - 4mm ²	0,5 - 10mm ²
- Conductor cross section flexible	0,5 - 4mm ²	0,5 - 10mm ²
- cross section, American Wire Gauge	26 - 12 AWG	AWG 20 - AWG 6
- Stripping length	12 mm	18 mm

IECEx / ATEX Terminal and Cross-Connection Arrangements:

Max voltage data according to IEC/EN 60079-7 in conjunction with protective earth terminal blocks of the A-Series, (increased safety "ec"):

Application Case**A - Continuous supply with AAP22 10 LO-LO and distribution to AAP22 4 LI-FS**

Information for further cross-connector arrangements will be provided on request.

CONDITIONS FOR SAFE USE:

This document should be read carefully before starting installation. Respect the information stated on the certification label of the terminal, e.g. Type/s of protection, gas group and temperature class. The installation of these terminals should only be carried out by authorized and qualified personnel whose training has included instruction on the various types of protection and installation practices, the relevant rules and regulations, and on the general principles of area classification.

The fuse holder shall be fully closed all times. Do not remove or replace the fuse when energized.

The fuse link shall not be replaced in the presence of a hazardous area and the associated enclosure shall be marked "Switch off supply and discharge any stored energy safely before removing fuse(s)".

The "stored energy" statement may be replaced by a statement declaring a de-energizing time before opening.

The fuse terminal is safe under the following conditions:

- Use only fuse links according to the Table 1.
- The temperature class must be verified in the final customers specific application.
- T4 based on 130 °C of the insulating material and 85 °C for the fuse carrier.

The informativ temperatures of Table 2 were determined with a nominal current of 100 % according to the IEC60947-7-3.

The fuse terminal blocks maybe used only for short circuit protecting applications based on the operational self heating at nominal current in combination with the specified fuse links at ambient temperatures according to the following table:

Table 1**Cartridge fuse-links (5 x 20 mm) ****

** only permissible for sandfilled fuse link

EN 60127-2 Spec. Sheet	Rated current
1	50 mA ... 10 A
2	32 mA ... 10 A
3	32 mA ... 10 A
5	100 mA ... 10 A
6	32 mA ... 10 A

Table 2:

AAP22 4 LI-FS:

		Temperature class:	
		T4 (130 °C)	T5 (100 °C)
		max. ambient temperature (°C)	
Separate arrangement:	Cartridge fuse-link 4 W/ 6,3A	41	-
Compound arrangement:	Cartridge fuse-link 2,5 W/ 6,3A	32	-

Mounting instructions:

The fuse terminal blocks are suitable for application in enclosures in atmospheres with flammable gases or combustible dust. For use in flammable gases these enclosures must satisfy the requirements according to IEC/EN60079-0 and IEC/EN60079-7. For use in combustible dust these enclosures must satisfy the requirements according to IEC/EN60079-0 and IEC/EN60079-31.

In combination with other terminal block series and sizes and if other accessories are used, the applicable creepage and clearance distances shall be met.

Schedule of Limitations:

The fuse terminal blocks shall be placed inside a suitable IECEx/ATEX certified IP54 enclosure for gas atmosphere. For dust atmosphere the terminal blocks shall be mounted inside a suitable IECEx/ATEX certified 't' enclosure (IEC/EN60079-31).

In combination with other terminal block series and sizes and if other accessories are used, the applicable creepage and clearance distances shall be met.

Regarding the use of accessories the instructions of the manufacturer must be followed.

The terminal blocks shall be placed inside a suitable IECEx/ATEX certified IP54 enclosure for gas atmosphere. For dust atmosphere the terminal blocks shall be mounted inside a suitable IECEx/ATEX certified 't' enclosure (IEC/EN60079-31).

The enclosure shall be constructed to block all sun and UV light from affecting the terminal blocks.

WARNING – Do not remove or replace the test fuse disconnect switch (AAP22 4 LI-FS) when energized!

When using the AAP22 4 LI-FS terminal blocks with other terminal blocks series or sizes or accessories, the requirements for clearance and creepage distances according to IEC/EN 60079-7 has to be observed. Regarding the use of covers, cross-connectors and end brackets the instructions of the manufacturer must be followed.

For cross connection accessories current rating, resistance across the terminal please refer to the table under "Technical data" above.

No other wire sizes or types than the ones specified in instructions must be used. The terminal blocks must either be mounted next to another block of the same type and size or with an end plate.

If smaller conductor cross sections than the rated conductor cross sections are used, then the corresponding lower current shall be stated in the Certificate of the complete apparatus.



- Cross connections with blank ends shall not be used.
- Manually cut cross connections shall not be used.

Essential Health and Safety Requirements:

Concerning ESRs this Schedule verifies compliance with the Annex II of ATEX directive only. By placing the product on the market, the of this manufacturer declares compliance with other relevant Directives, and all other safety related requirements including those of Annex II of this Directive.