

## Hardware Installation Guide

### Managed Fast Ethernet Switch

**IE-SW-AL06LM-4TX-2SC (Part No. 2682260000)**  
**IE-SW-AL06LM-4TX-2SCS (Part No. 2682270000)**

## 1. Introduction

Ethernet Switches from Weidmüller are designed for industrial applications and fitted with a robust housing. To ensure reliable, error-free operation, and to prevent damage or injury, please read the operating instructions, all safety information provided in this document and any other safety information that were supplied with the product.

## 2. Safety notice

	The device heats up during operation. Allow the unit to cool down or use protection gloves when carrying out any work.
	The device may only be connected to the supply voltage shown on the product label. Higher voltage than specified will destroy the device. The device must be supplied by a SELV source as defined in the Low Voltage Directive 2014/35/EU and 2014/30/EU.
	Installation, commissioning and maintenance may only be performed by qualified electricians.
	Observe the operating instructions.

	<ul style="list-style-type: none"> <li>Indoor use and pollution degree II, it must be wiped with a dry cloth for clean up the device and label.</li> <li>Utilisation en intérieur et degré de pollution II, il faut l'essuyer avec un chiffon sec pour nettoyer l'appareil et son étiquette.</li> <li>Do not block air ventilation holes.</li> <li>Ne bloquez pas les orifices de ventilation.</li> <li>If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.</li> <li>Si l'appareil est utilisé d'une manière non spécifiée par le fabricant, la protection qu'il apporte peut se voir diminuer.</li> <li>Shall be mounted in the Industrial Control Panel and ambient temperature is not exceed 75 degrees C.</li> <li>Doit être monté dans le panneau de commande industriel et la température ambiante ne doit pas dépasser 75 degrés C.</li> </ul>
--	---

**Intended use:** The device is intended for the realization of communication networks within an industrial environment, it is intended to be used in a restricted access location. The device may only be used within the scope of the specified technical data. The device is intended to be mounted to a well-grounded mounting surface, such as a metal panel. Any other use may result in unintentional malfunction and damage. Observing the documentation is part of the intended use.

**Environmental conditions:** This equipment is intended to be used in a restricted access location. When planning the installation site make sure that the ambient temperature during operation will not exceed the temperature given in the technical data. Also make sure that the air flow will not be compromised by other devices. Ensure that the mounted and wired device is not exposed to any mechanical stress.


**FCC compliance:** This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## 3. Package Checklist

Your Ethernet Switch is shipped with the following items:

- Ethernet Switch
- Hardware Installation Guide (printed)
- 7-Pin Terminal connector
- Protective caps for RJ45 and fiber optic ports

## 4. Panel Layouts

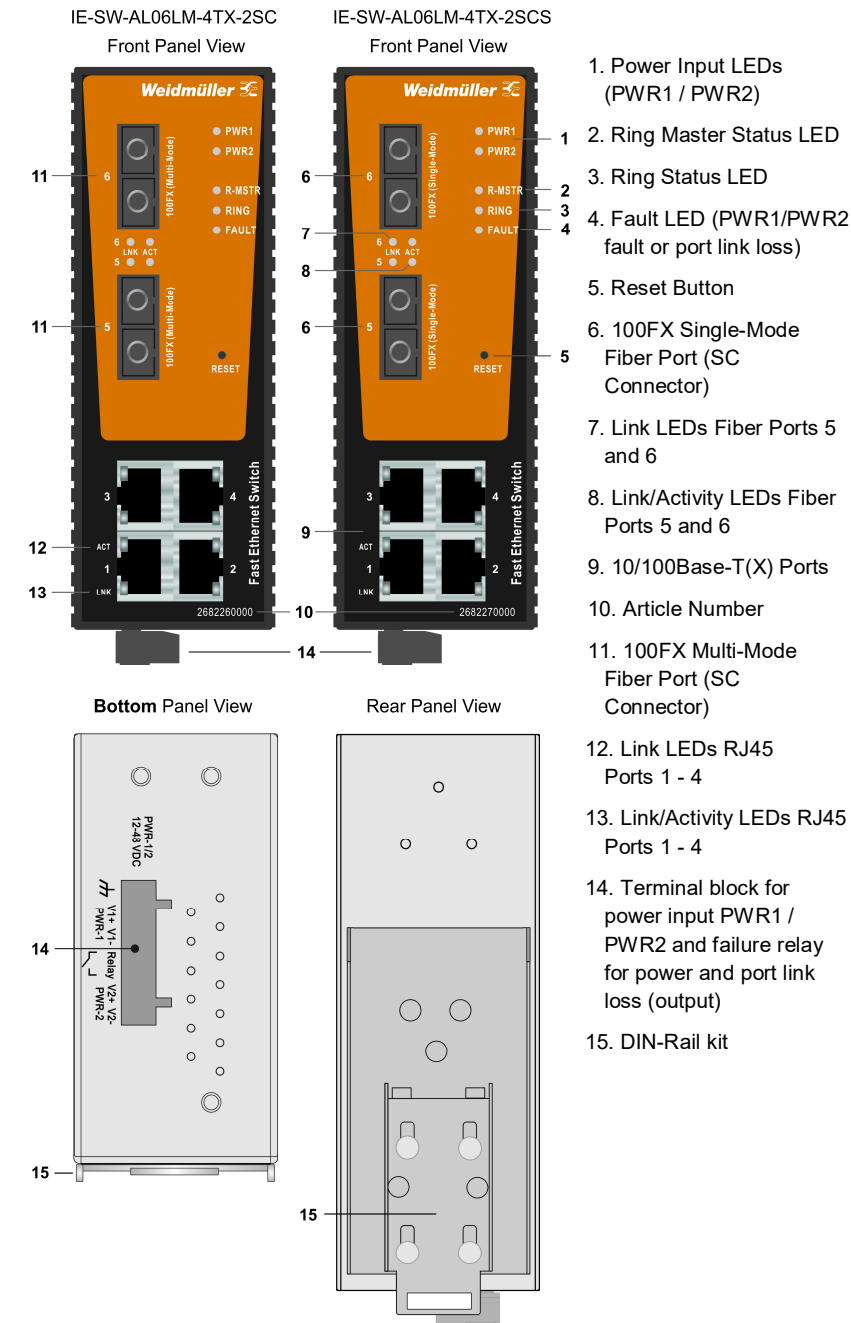


## 5. DIN-Rail Mounting

Slide the switch onto a DIN-rail and make sure that the switch's Din-rail clip clicks into the rail firmly.

**STEP 1:** Place the mounting clip from above onto the mounting rail.


**STEP 2:** Press the device against the DIN rail until the fastening element engages on the mounting rail.

To remove the Ethernet Switch from the DIN-rail pull down the latch with a screwdriver then move the device away from the DIN rail and lift it up.

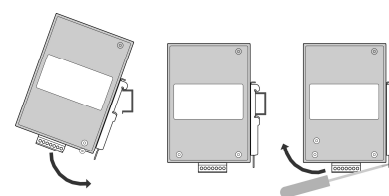

## 6. Mounting Dimensions

(units = mm)

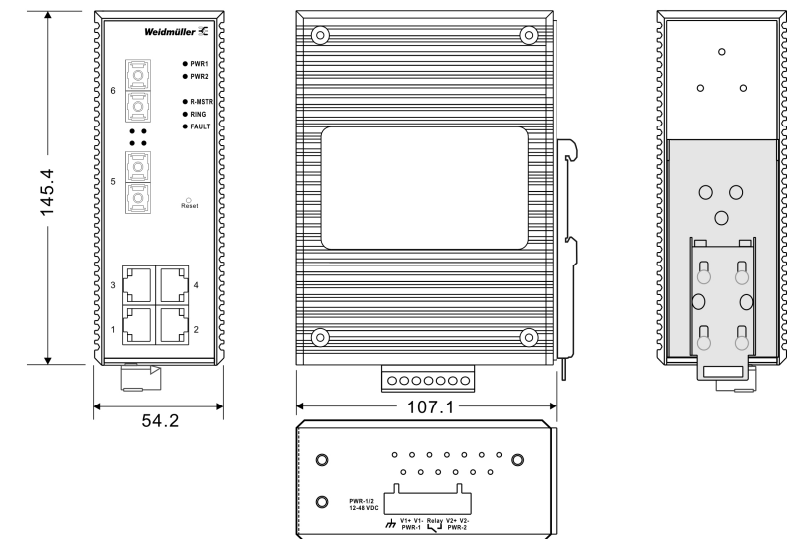

## 7. Grounding Ethernet Switch

	<b>ATTENTION</b> <ul style="list-style-type: none"> <li>Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI).</li> <li>the ground connection from the ground screw to the grounding surface prior to connecting devices.</li> <li>This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.</li> <li>The shielding ground of the RJ45 ports are electrically connected to the ground connection (screw).</li> </ul>
--	--


## 8. Wiring Redundant Power Inputs and Fault Alarm Relay

The switch supports redundant power supply inputs and provides a fault alarm relay for detecting the user-configurable failure events

- Interruption of Power 1 or Power 2 and
- Link Loss of Ethernet Ports.

Refer to illustration below for correct wiring.

	<b>Warning / Avertissement</b> <ul style="list-style-type: none"> <li>Take into consideration the following guidelines before wiring the device</li> <li>Tenez compte des directrices suivantes avant de câbler l'appareil.</li> <li>Terminal block is mating with Plug and suitable for 12-24AWG. Torque value 4.5 lb-in.</li> <li>Le bornier est compatible avec les connecteurs et convient pour 12-24AWG. Valeur de couple 4,5 lb-in.</li> <li>The temperature rating of the input connection cable should higher than 105°C.</li> <li>La température de service nominale du câble d'entrée doit être supérieure à 105 °C.</li> <li>Supplied by SELV source evaluated by UL 61010-1 or 61010-2-201 power supply only.</li> <li>Fourni par la source SELV évaluée uniquement par l'alimentation UL 61010-1 or 61010-2-201.</li> </ul>
--	--

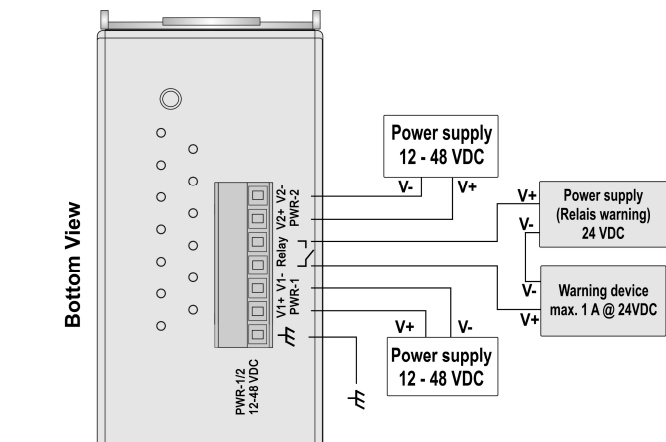

Behavior of fault alarm relay (can be triggered by configurable events power failure or port link down):

- Relay contact is closed if the device is powered-off.
- Relay contact is open if the device is powered-on and no alarm conditions exist (neither Power Failure Alarms nor Port Link Loss Alarms are activated (Web menu Warnings → Fault Relay Alarm).
- Relay contact closes if any of an activated alarm condition happens.

## 9. Communication Connections

Switch **IE-SW-AL06LM-4TX-2SC** is equipped with following communication interfaces:

- 4 x 10/100BASE-T(X) ports
- 2 x 100BASE-FX ports with SC connector (Multi-mode)

Switch **IE-SW-AL06LM-4TX-2SCS** is equipped with following communication interfaces:

- 4 x 10/100BASE-T(X) ports
- 2 x 100BASE-FX ports with SC connector (Single-mode)

Please only use cables suitable for the respective type of communication and ensure that signals are protected from possible interference.

### 9.1 10/100Base T(X) RJ45 Ports

The 10/100BaseT(X) ports located on Ethernet Switch's front panel are used to connect to Ethernet-enabled devices. Below we show pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports. Auto MDI-X ensures that both wiring-schemes are supported. (Automatic crossover function)

Each RJ45 Ethernet port independently supports auto-negotiation for recognizing the transmission speed 10 Mbps or 100 Mbps according to the IEEE802.3 standard. This means that some of connected Ethernet devices could operate at 10 Mbps, while at the same time other nodes are operating at 100 Mbps.


#### 10/100Base T(X) RJ45 Pinouts

MDI Port Pinouts		MDI-X Port Pinouts		8-pin RJ45
Pin	Signal	Pin	Signal	
1	Tx+	1	Rx+	
2	Tx-	2	Rx-	
3	Rx+	3	Tx+	
6	Rx-	6	Tx-	


### 9.2 100BASE-FX Fiber Ports

The switch is equipped with 2x 100BASE-FX fiber optic ports with SC connectors. For connecting fiber ports between 2 devices consider connecting wire Tx (transmit) of device 1 to wire Rx (receive) of device 2, and vice versa. Remember that fiber optic connections generally are using the full-duplex transmission mode.

#### SC-Port Pinouts



#### SC-Port to SC-Port Cable Wiring

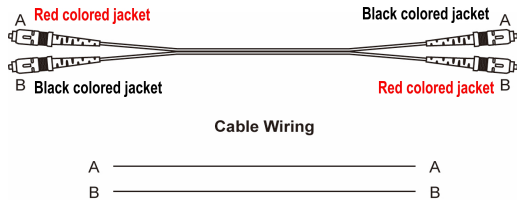

#### ATTENTION

This is a Class 1 Laser/LED product. To avoid causing serious damage to your eyes, do not stare directly into the Laser Beam.

## 10. User Management

### 10.1 Device Access (Login to Web Interface)

The Web interface of the Switch can be accessed via following factory default settings:

IP address / Netmask:	<b>192.168.1.110 / 255.255.255.0</b>
User name:	<b>admin</b>
Password:	<b>Detmold</b>

Connect the PC to any Ethernet port of the managed Switch and set the PC's IP address to a free one of range 192.168.1.0 / 255.255.255.0

Start a web browser and enter the IP address of the connected Switch into the browser's address line (<http://192.168.1.110>). After the appearance of prompt (login) enter the login credentials. After confirmation of your input with "OK" the home page of the switch will be displayed.

**Note:** For more detailed information about configuration and use of the device features please read the downloadable manual from Weidmüller's website (Product catalogue → Automation & Software → Industrial Ethernet → Advanced Line managed Switches → Select Product → Click and expand section „Downloads“ → Download needed software or documentation).

### 10.2 Reset Button

- Press reset button for 2 to 3 seconds to reboot the switch (Warm Start).
- Press reset button for >= 5 seconds to reset the switch to factory default settings.

## 11. LED Indicators

The front panel of the Ethernet Switch contains several LED indicators. The function of each LED is described in the table below.

LED	Color	Status	Description
PWR1	Green	On	Power is supplied to power input PWR1.
PWR2	Green	On	Power is supplied to power input PWR2.
R-MSTR (Ring Master)	Green	On	Is Ring Master of an enabled O-Ring.
Ring	Green	On	O-Ring redundancy is enabled.
		Blinking	Ring structure is broken (No redundancy).
LNK	Amber	On	Port's link is active.
		Off	Port's link is inactive.
ACT	Green	On	Port's link is active
		Off	Port's link is inactive.
		Blinking	Transmitting data.
FAULT	Amber	On	Fault Relay indication for Power failure and Port link loss.

## 12. Specifications

Technology		
Ethernet Standards	IEEE 802.3 for 10BASE-T	
	IEEE 802.3u for 100BASE-TX and 100BASE-FX	
	IEEE 802.3x for flow control	
	IEEE 802.1D for STP (Spanning Tree protocol)	
	IEEE 802.1w for RSTP (Rapid Spanning Tree protocol)	
	IEEE 802.1s for MSTP (Multiple Spanning Tree Protocol)	
IEEE 802.1AB for LLDP (Link Layer Discovery Protocol)		
Processing Type	Store and Forward	
MAC Table size	2K	
Packet buffer size	1 Mbit	
Backplane bandwidth	1.2 Gbps	
Interfaces		
RJ45 Ports	10/100BASE-T(X) auto negotiation speed, F/H duplex mode and auto MDI/MDI-X connection	
LED Indicators	PWR1, PWR2 (Power), Fault (Relay), Ring Master, Ring Status, Port Link, Port Activity	
Relay Contact	Max. 1A @ 24 V DC	
Fiber optic ports	IE-SW-AL06LM-4TX-2SC	IE-SW-AL06LM-4TX-2SCS
Fiber Ports number	2	2
Fiber Ports standard	100BASE-FX	100BASE-FX
Fiber Mode	Multi-mode	Single-mode
Fiber Diameter	62.5/125 µm	9/125 µm
	50/125 µm	
Connector Type	SC-Duplex	SC-Duplex
Typical Distance	2 km	30 km
Wavelength	1310 nm	1310 nm
Transmission power, max.	-14 dbm	-8 dbm
Transmission power, min.	-23.5 dbm	-15 dbm
Receive power, max.	0 dbm	0 dbm
Receive power, min.	-31 dbm	-34 dbm
Link Budget	7.5 db	19 db
Power	IE-SW-AL06LM-4TX-2SC	IE-SW-AL06LM-4TX-2SCS
Input Voltage	24 V DC (12 - 48 V DC), 2 redundant inputs	
Input Current	0.47 A @ 12 V DC	
	0.24 A @ 24 V DC	
	0.12 A @ 48 V DC	
Connection	One removable 7-pin terminal block, Wiring cable 12-24AWG	
Overload Current Protection	Present	
Reverse Polarity Protection	Present	
Physical Characteristics		
Housing	IP30 protection, metal	
Dimension (W x H x D)	54.2 x 145.4 x 107.1 mm (2.13 x 5.72 x 4.22 inch)	
Weight	649 g	
Installation	DIN-rail	
Environmental conditions		
Operating Temperature	-40 to 75°C (-40 to 167°F)	
Storage Temperature	-40 to 85°C (-40 to 185°F)	
Ambient Relative Humidity	5 to 95% (non-condensing)	
Altitude	up to 2000 m	
Regulatory Approvals		
Safety	EN 62368-1, UL 61010-1, UL 61010-2-201	
EMC	EN 55032, EN 55024, FCC Part 15 Subpart B Class A, IEC 61000-4-2 ESD: Contact: 4 kV; Air: 8 kV, IEC 61000-4-3 RS: 80 MHz to 1 Ghz: 3 V/m, IEC 61000-4-4 EFT: Power: 0.5 kV; Signal: 0.5 kV, IEC 61000-4-5 Surge: Power: 1 kV; Signal: 1 kV, IEC 61000-4-6 CS: 3 Vrms	
	Shock	IEC 60068-2-27
	Free Fall	IEC 60068-2-31
	Vibration	IEC 60068-2-6
	MTBF	IE-SW-AL06LM-4TX-2SC
Time	595.597 hrs	609.551 hrs
Database	Telcordia SR332	
Warranty		
Time Period	5 years	

### Contact Information

Weidmüller Interface GmbH & Co. KG  
Klingenbergstraße 26, 32758 Detmold / Germany  
Phone +49 (0) 5231 14-0, Fax +49 (0) 5231 14-292083  
E-Mail [weidmueller@weidmueller.com](mailto:weidmueller@weidmueller.com), Internet [www.weidmueller.com](http://www.weidmueller.com)